

Quick Start Guide

Scope of Delivery



1 x **CAMPERNET**



1 x terminal block



4 x TX10

Legal Notices

technical information

www.antretter-huber.com/technische-hinweise

legal references

www.antretter-huber.com/rechtliche-hinweise

declaration of conformity

www.antretter-huber.com/konformitätserklärung

WEEE Nr.: DE 50397397


Voltage range: 9–30 VDC max. 3 A



Installation Instruction

Choose a suitable location for the **CAMPERNET**. Pay attention to the following points:


- 10 cm circumferential distance
- Do not let SIM slot point downwards
- Do not expose to direct sunlight
- Do not cover with clothing or similar

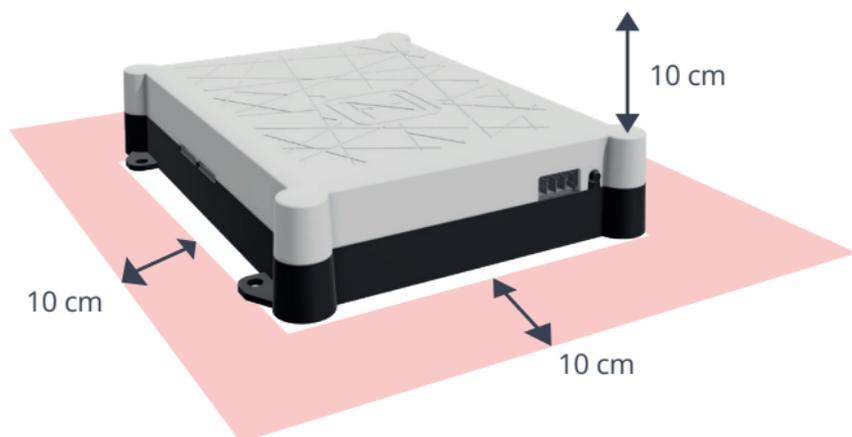

Power Supply: 9–30 VDC max. 3 A


Cable Cross-Section: 0,25–1,5 mm² (strand/wire)

Fuse cable type accordingly

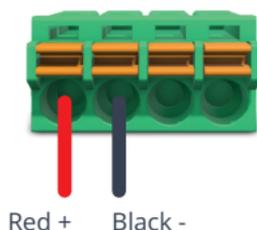

WLAN Connection

For operation with a smart device, a WLAN connection to the **CAMPERNET** is required. Simply scan the **QR-code** on your device or connect it manually via end device's WLAN menu.

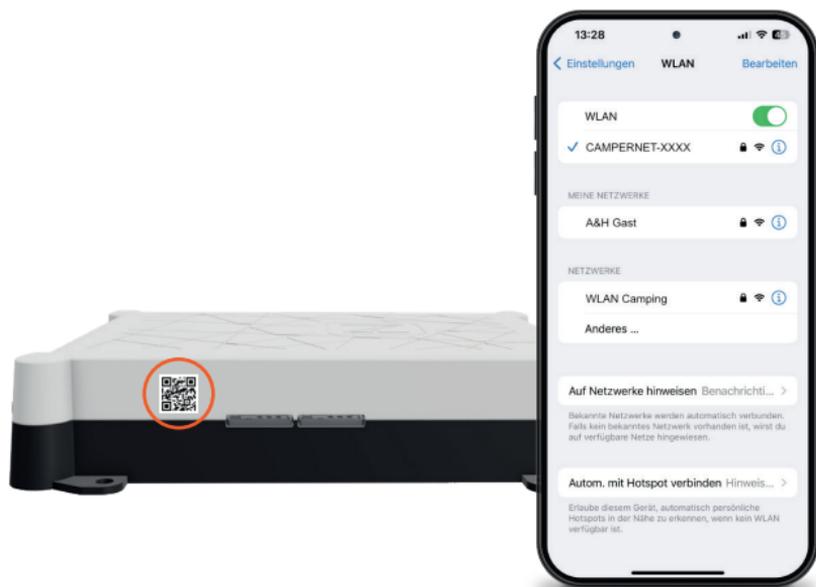

Launch user interface

To launch **CAMPERNET's user interface**, enter/type the following web address in your browser:



<http://10.10.10.10>



If the page won't load, turn off mobile data on your phone.



WebApp Linking

iOS

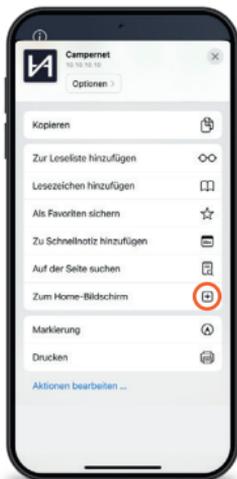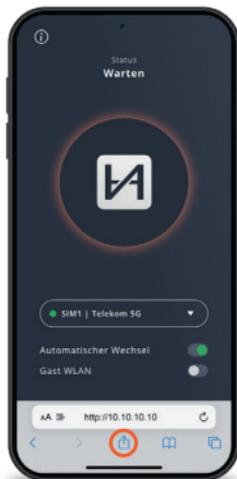

Display: Safari

Android

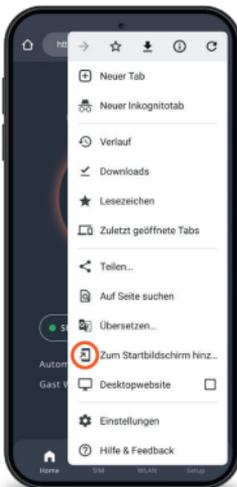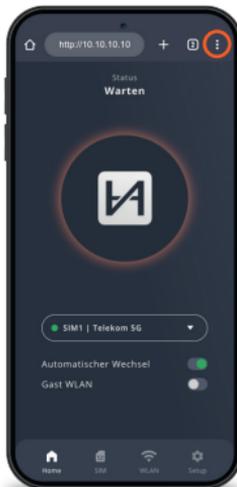


Display: Google Chrome



Directly reach user interface with the WebApp icon.
Entering **http://10.10.10.10** is no longer necessary.


User Interface

WebApp CAMPERNET

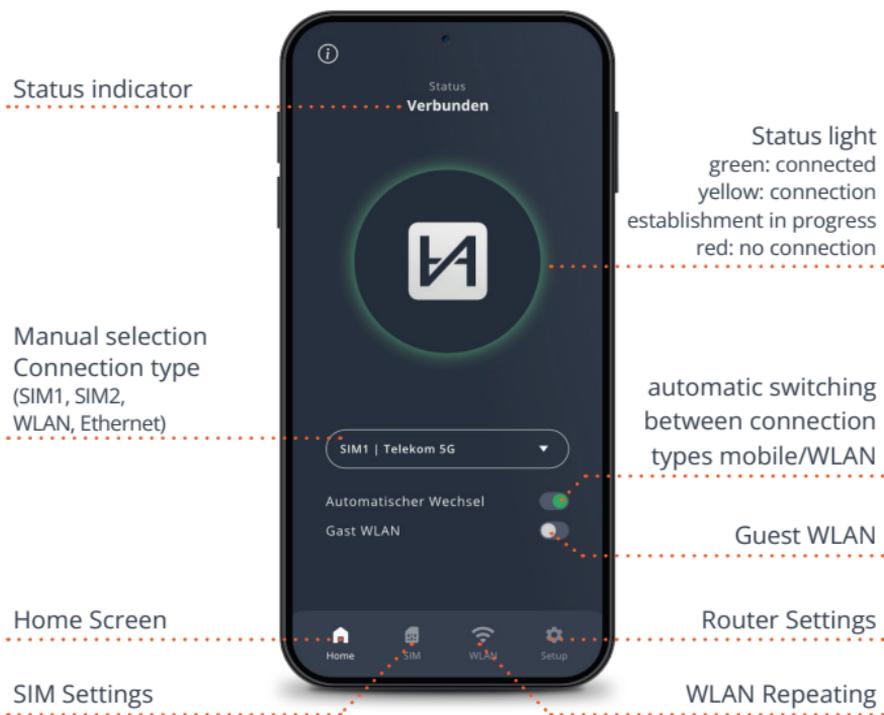

Status LED on the router corresponds to WebApp's status light. 5 min after closing the WebApp the Status LED on the CAMPERNET turns off. The button on the CAMPERNET activates it again.

SIM Settings

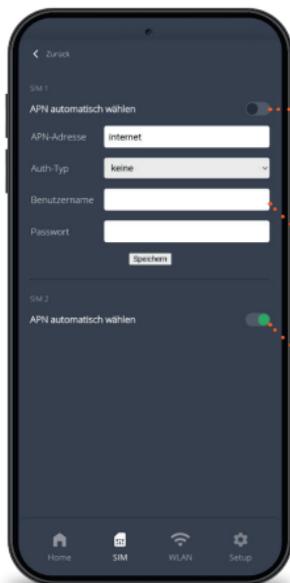


Switch to APN manual

Manual SIM Configuration
(APN settings according to SIM contract data)

Automatic SIM Configuration

If a PIN is required, an input field appears when the SIM-card is inserted.

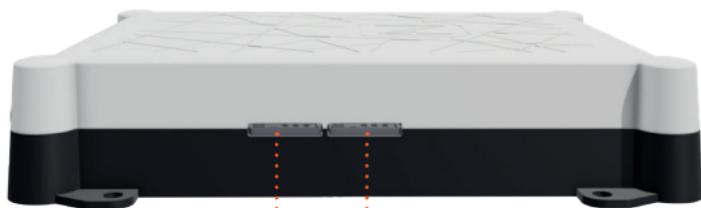


Two SIM card slots
Insert Micro-SIM until it clicks.
The SIM's golden contacts point downwards.



SIM-card data is saved and available for both SIM slots.

WLAN Repeating

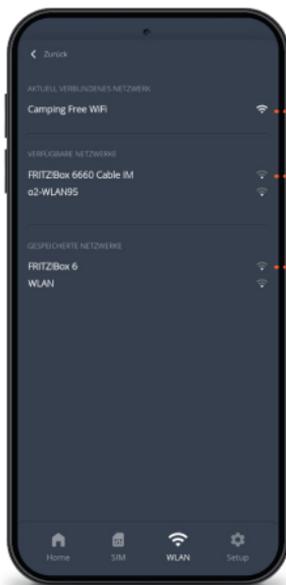

Current WLAN connection

Available WLAN networks

Known WLAN networks
(can be removed)

Automatic forwarding to
WiFi login pages



When repeating WiFi, the **CAMPERNET** automatically switches to the external antenna to maximize its range.

Router Settings



Configuration
WLAN name and password

Connected devices WLAN

Activate guest WLAN

Configuration WLAN name,
password and data-limit

Connected devices guest WLAN



The internal WLAN has priority over the guest WLAN.

Service

You can find our frequently asked questions at
www.antretter-huber.com/service

For further questions please contact
service@antretter-huber.com

Stay in contact with us



facebook.com/AntretterundHuber



instagram.com/antretterundhuber



youtube.com/@antretterhuber831



Thank you for choosing our **CAMPERNET**. With **CAMPERNET** you enjoy unforgettable holiday memories while being abroad.

